

SHUFFLE-BOWLER

PARTS CATALOG

SECTION 1: FRONT CABINET ASSEMBLY

AS-385-1.....Gong Assembly.....

PARTS

P-748-2.....Bell.....
CO-28-0-15....Coil.....
A-629.....Plunger and rivet.....

AS-974.....Puck Lockout Assembly.....

PARTS

 
 
 
A-613-1.....Core plug.....
A-1297.....Plunger.....
E-184-35.....Solenoid.....
SP-226.....Spring.....

MISCELLANEOUS PARTS IN FRONT CABINET:

S-423-9.....Bar in front of Top Glass.....
S-1284.....Bar (foul line).....
P-1900-3.....Cash Box.....
M-112-5.....Coin-Chute (10¢).....
CA-444-2.....Front-Door only.....
P-1435.....Glass edging for top glass.....
CA-451.....Leg.....
CA-452.....Leg.....
CA-461.....Leg.....
M-163.....Leg-Adjuster.....
M-281.....Lock and keys for front door.....
M-281-9.....Lock and keys for side door.....
CA-445.....Panel (7 ft., 3 in. long by 15-1/2 in. wide).....
S-1279.....Puck.....
C-255.....Puck Retainer.....
SW-584.....Roll-over Switch (Puck).....
CA-444-3.....Side-Door only.....
E-108-24.....Toggle Switch.....
G-196.....Top Glass.....

SEE CHART ON NEXT PAGE

BEFORE ORDERING SHUFFLE-BOWLER LEGS,
CHECK GAME AGAINST THIS CHART

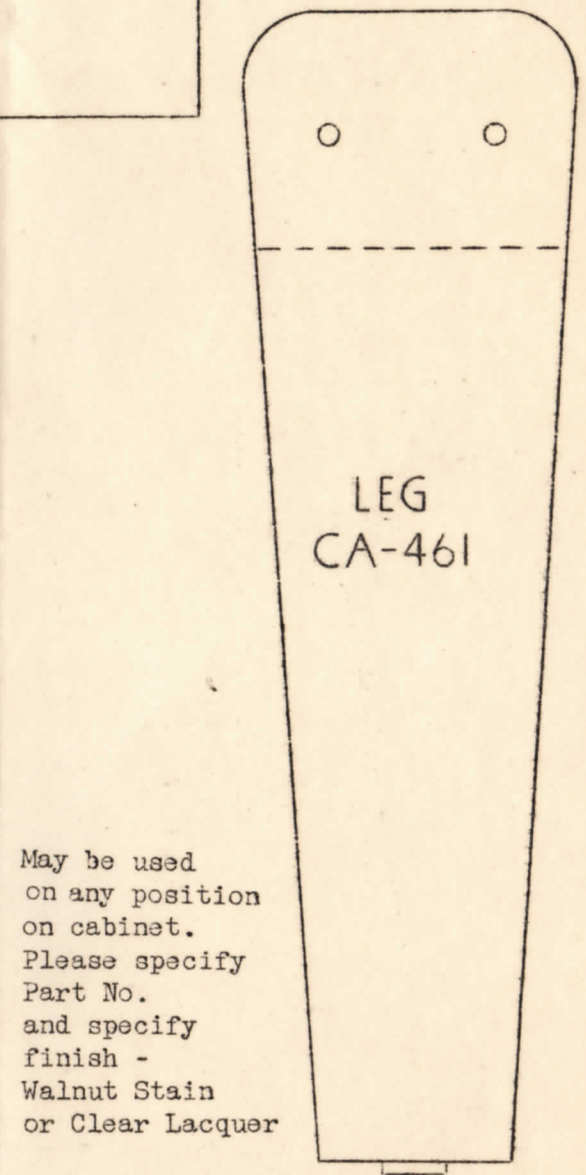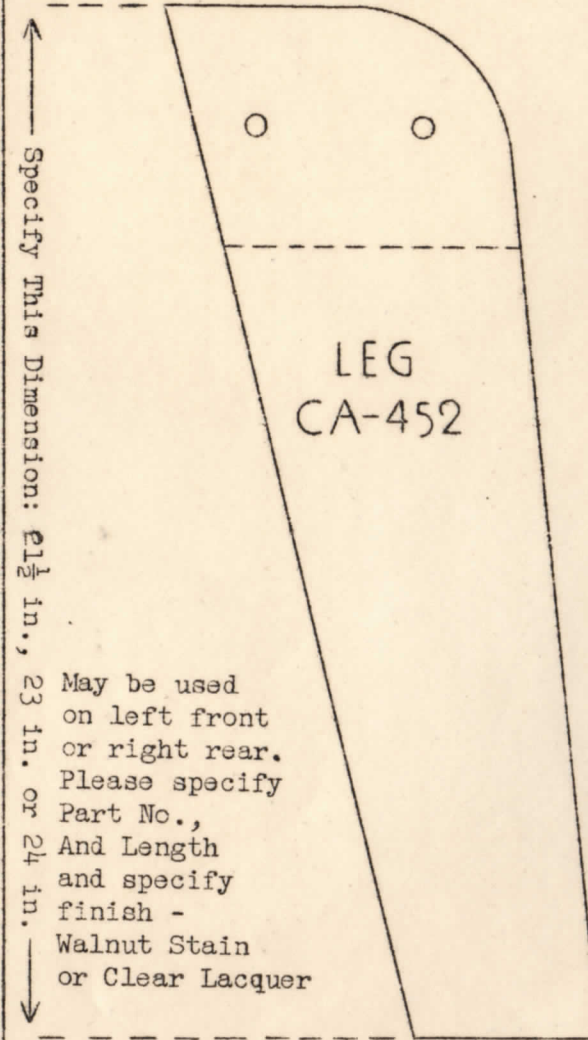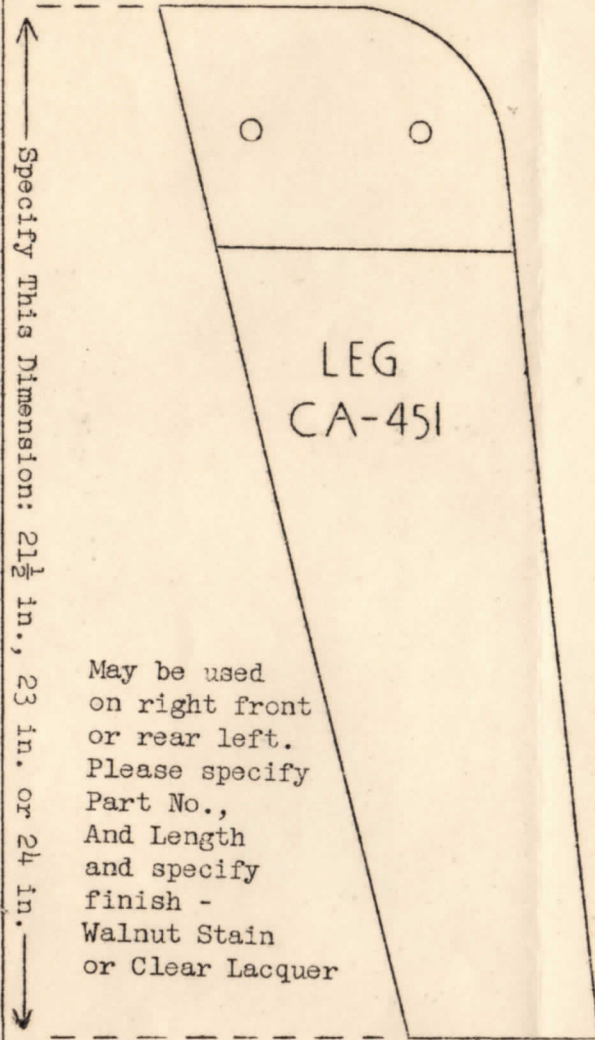

SECTION 2: MOUNTING BOARD ASSEMBLY

AS-963.....Score Timer Assembly.....

PARTS

W-297.....Contact plate (wired).....
E-119-49.....Motor.....
A-1285.....Wiper Assembly.....

AS-968.....Strike and Spare Stepper Assembly.....

PARTS

CO-26-H-10....Coil (Step-up).....
CO-28-R-15....Coil (Reset).....
W-301.....Contact Plate (wired).....
A-613-4.....Core Plug (Reset).....
A-613-1.....Core Plug Assembly (Step-up).....
S-496-5.....Plunger for 26-H-10 Coil.....
A-463-24.....Ratchet and Shaft Assembly.....
P-2254.....Reset Escapement Pawl.....
A-316-1.....Reset Plunger.....
SP-100-17.....Spring (Reset Escapement Pawl).....
SP-200-2.....Spring (Reset Plunger).....
SP-303.....Spring (Reset Pawl).....
SP-314.....Spring (Ratchet).....
SP-100-55.....Spring (Step-up Arm).....
SP-100-30.....Spring (Step-up Pawl).....
A-344-12.....Step-up Arm Assembly.....
SW-417.....Switch (Step-up Arm).....
A-1296.....Wiper Assembly.....

AS-190-11.....Trip Relay Assembly.....

PARTS

A-261-2.....Armature Plate (1 used).....
A-261.....Armature Plate (14 used).....
A-258-4.....Armature Latch and Pin (15 used).....
CO-32-K-50....Coil (1 used).....
CO-29-K-11....Coil (14 used).....
A-1288.....Core Plug and Bracket for E-184-34 Solenoid.....
A-1311.....Plunger for E-184-34 Solenoid.....
S-739-29.....Plunger Pin.....
E-184-34.....Solenoid.....
SP-100-17.....Spring for A-258-4 Armature Latch (15 used).....
SP-115.....Spring for A-261 Armature Plate (14 used).....
SP-130.....Spring for A-261-2 Armature Plate (1 used).....

MISCELLANEOUS PARTS ON MOUNTING BOARD:

AS-964.....Eight Relay Assembly.....
C-2794-1.....90 Ohm 50 Volt Coil for above Assembly.....
E-133-5.....Fuse (5 Amp.).....
E-133-15.....Fuse (15 Amp.).....
E-119-51.....Motor for Relay Timer Assembly.....
AS-962.....Relay Timer Assembly.....
E-122-5.....Transformer.....

SECTION 3: SWITCH MOUNTING BOARD ASSEMBLY

PARTS

E-125-5.....Lamp No. 55.....
E-120-10.....Lamp Socket.....
C-225-5.....Panel Cap (White).....
AS-965.....Switch Actuator Assembly (Right-Single).....
AS-965-1.....Switch Actuator Assembly (Left-Single).....
AS-966.....Switch Actuator Assembly (Right-Double).....
AS-966-1.....Switch Actuator Assembly (Left-Double).....
A-1294.....Switch Bracket with Pin (Right).....
A-1294-1.....Switch Bracket with Pin (Left).....
SW-582.....Switch (Single).....
SW-583.....Switch (Double).....
CA-446.....Switch Mounting Board with white panel caps only...

SECTION 4: LIGHT BOX ASSEMBLY

AS-969.....10 TO 300 Counter Assembly.....

PARTS

CO-25-II-7.....Coil (Step up).....
CO-28-R-15.....Coil (Reset).....
W-299.....Contact Plate (wired).....
A-613.....Core Plug Assembly (Reset).....
A-613-1.....Core Plug Assembly (Step-up).....
S-496-5.....Plunger for Step-up Coil.....
A-316.....Plunger and Washer Assembly (Reset).....
A-463-32.....Ratchet and Shaft Assembly.....
P-138-1.....Reset Pawl.....
SP-200-2.....Spring (Reset Plunger).....
SP-393.....Spring (Reset Pawl).....
SP-314.....Spring (Ratchet).....
SP-100-30.....Spring (Step-up Pawl).....
SP-100-55.....Spring (Step-up Arm).....
A-344-9.....Step-up Arm.....
SW-593.....Switch.....
A-1292.....Wiper Assembly.....

SECTION 4: LIGHT BOX ASSEMBLY (Continued)

AS-970.....1 TC 9 Counter Assembly.....

PARTS

CO-26-H-10....Coil (Step-up).....
W-298.....Contact plate (wired).....
A-613-1.....Core Plug Assembly.....
S-496-17.....Plunger.....
A-463-33.....Ratchet and Shaft Assembly.....
P-261.....Reset Pawl.....
SP-100-10....Spring (Step-up Arm and Stop Pawl).....
SP-100-30....Spring (Step-up Pawl).....
A-344-13....Step-up Arm.....
SW-417.....Switch.....
A-1286.....Wiper Assembly.....

AS-971.....Frame Assembly.....

PARTS

CO-26-H-10....Coil (Step-up).....
CO-28-R-15....Coil (Reset).....
W-300.....Contact Plate (wired).....
A-613.....Core Plug for both Coils.....
S-496.....Plunger for Step-up Coil.....
A-316.....Plunger and Washer Assembly (Reset).....
A-463-31.....Ratchet and Shaft Assembly.....
P-138-1.....Reset Pawl.....
SP-100-9....Spring for Step-up Arm.....
SP-200-2....Spring for Reset Plunger.....
SP-303.....Spring for Reset Pawl.....
SP-314.....Spring for Ratchet.....
SP-100-30....Spring for Step-up Pawl.....
A-344-12....Step-up Arm Assembly.....
SW-612.....Switch.....
A-1293.....Wiper Assembly.....

MISCELLANEOUS PARTS IN LIGHT BOX

CA-450-2.....Back-Door only.....
G-194.....Back-Glass.....
E-125-5.....Lamp No. 55.....
E-120-2.....Lamp Socket.....
M-281.....Lock and keys.....

Shuffle Board Powder (1 lb. can).....